

L e e m i n g L U T P R O

Camera Setup Guide:	DJI Osmo Pocket 2
Colour Space:	Rec709 gamma 2.4
Target Exposure:	ETTR
LUT Version:	Pro 4
Guide Version:	2025.01.01

INTRODUCTION

Thank you for purchasing Leeming LUT Pro™, the most accurate and professional Look Up Tables (LUTs) for your camera.

The LUTs have been carefully developed to get the maximum dynamic range and colour accuracy out of the supported profiles, giving you unparalleled Rec709 precision as well as perfect camera matching with other supported cameras in the Leeming LUT Pro™ range. Use them in conjunction with ETTR shooting principles and you will get the highest possible quality images out of the camera every time.

I am confident you will find these the most accurate LUTs for your camera. Anything less and I wouldn't have put my name on them!

Enjoy :)

Paul Leeming
Director / Writer / Cinematographer / Colorist
Visceral Psyche Films
www.visceralpsyche.com

LICENCE

You are granted a personal licence to use Leeming LUT Pro™ on three devices. For use with more devices, please contact Visceral Psyche Films for bulk discount pricing. You may not upload the LUTs anywhere, share them with other people or incorporate them into other LUTs for derivative use (i.e. making creative LUTs using Leeming LUT Pro™ as the underlying base), whether they be for sale or not. Please respect the work that has gone into the LUTs and support those supporting you.

COMPATIBILITY

Leeming LUT Pro™ is compatible with any software or hardware device that supports a 33x33x33 cube LUT.

REQUIREMENTS

1. DJI Osmo Pocket 2.
2. Spectrally neutral white or grey card, for white balancing the camera.
3. Leeming LUT Pro 4 – DJI Osmo Pocket 2.

NOTE: Items highlighted in yellow have an adverse effect on LUT accuracy if changed away from the recommended values in this guide.

QUICK REFERENCE OF IMPORTANT CAMERA SETTINGS

The settings below are recommended for the LUTs to work properly, in conjunction with an accurate white balance and using the ETTR zebras to show where the highlights of an image are clipping.

If you deviate from these settings, your colorimetry and luma curves won't match precisely to Rec709 and you may get other errors in your footage. You can find the details of how to set these in the next section.

	D-Cinelike (10bit)	Normal
Overexposure Alert (ETTR Zebras)	ON	ON
Color Mode	D-Cinelike	Normal
Pro Mode	ON	ON
Quality*	High Quality	High Quality

* These settings won't affect your colorimetry or luma curves but they will affect overall picture quality if altered.

FULL CAMERA SETUP GUIDE

Based on the Osmo Pocket 2, using the DJI Mimo phone app interface. Your camera may not have all the same features so adjust as necessary.

1. Connect to your camera via the DJI Mimo app, then press the Camera button to see your camera view.
2. Select the Video tab on the right side of the screen.
3. Now tap on the three dots bottom left of screen to enter the Video Settings Menu.
4. On the Basic tab, choose your Anti-Flicker settings as needed.
5. Switch Pro settings ON and set Color Mode to D-Cinelike. Set your Video Format as needed. Set Overexposure Alert ON. Set Histogram OFF.
6. Set White Balance to Custom and adjust to the correct Kelvin value. If you hold a white balance card in front of the camera when switching from Auto to Custom, the first custom value will be very close to neutral, so this is my recommended method for consistency and avoiding any colour shift during shooting. You will need to tweak the white balance in post BEFORE applying the LUT, so I recommend shooting a few seconds of your white balance card beforehand in the light you expect when shooting, for best accuracy in post.
7. Tap on the four squares icon bottom left of screen to get to the General tab.
8. Here you can format your SD card and set Video Cache ON to record a low quality backup to your phone's memory simultaneously.
9. The camera with a bar under it is the Gimbal menu. Adjust as needed.
10. Exit the Settings Menu by tapping outside of the box back to the main screen.
11. Tap the AUTO Camera icon left side of screen to access the exposure functions, then choose the Manual (M) option. Adjust your ISO and Shutter as needed. You can use Auto but be aware that it may shift during the shot in that case.
12. Tap on the 4K24 button to open the resolution and framerate section. I recommend 4K at 24fps for cinematic mode, but you can choose your framerate and resolution as desired for your project. Set Quality to High Quality.
13. Make sure Glamour Mode is OFF to ensure accurate colorimetry.

You are now ready to use Leeming LUT Pro™ with the maximum picture quality available. Be sure to visit the website to read up on how to use ETTR (Expose To The Right) principles to get the most dynamic range out of your sensor, as well as the associated Leeming LUT Pro™ LUT Installation Manual on how to apply the LUTs to your footage in post-production:

www.LeemingLUTPro.com

HARDWARE / SOFTWARE QUIRKS AND BUGS

1. You can use the ON/OFF button to quickly re-center the gimbal or flip it for selfie mode. Two quick taps in succession re-centers the gimbal to level, and three quick taps in succession flips the gimbal around to selfie mode. Finally, one quick tap changes modes between Photo, Video and Timelapse. Long press the button to turn the camera on or off.
2. The screen is touch enabled so you can also set all the functions that way through various swipes and taps. See your camera's user guide for how these work. I wrote this guide for the Mimo app since it's easier and quicker to set up that way.

GUIDE CHANGELOG

2025.01.01 Initial release.